

VDO FUEL GAUGE

FITS VEHICLES WITH A J11553 SENDER UNIT

JK Part Numbers: J11547

FITTING GUIDE

NOTE: Before installing the gauge, disconnect the earth terminal from the battery on your vehicle so that you do not create any short-circuits which may result in fire.

1. Choose a location to mount your gauge, allowing enough room at the rear.
2. Drill a hole 52mm in diameter then test the size by inserting your gauge.
3. Secure it from the back, using either the large ring or the clamps, depending on the gauge model supplied.

Wire up the gauge, following the wiring guidelines shown.


4. Run a switched 12v live to the + symbol on the back of the gauge, this should be after the fusebox and should only be live when the ignition is turned on.
5. Run a wire from the S symbol on your gauge to the fuel tank sender, you may be able to use the wire already installed in your vehicle.
6. Run a wire from the lighting circuit to either of the terminals on the bulb holder.
7. Run a wire to earth from the remaining terminal.
8. Reconnect your battery.

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.

VDO FUEL GAUGE

FITS VEHICLES WITH A J11553 SENDER UNIT

JK Part Numbers: J11547

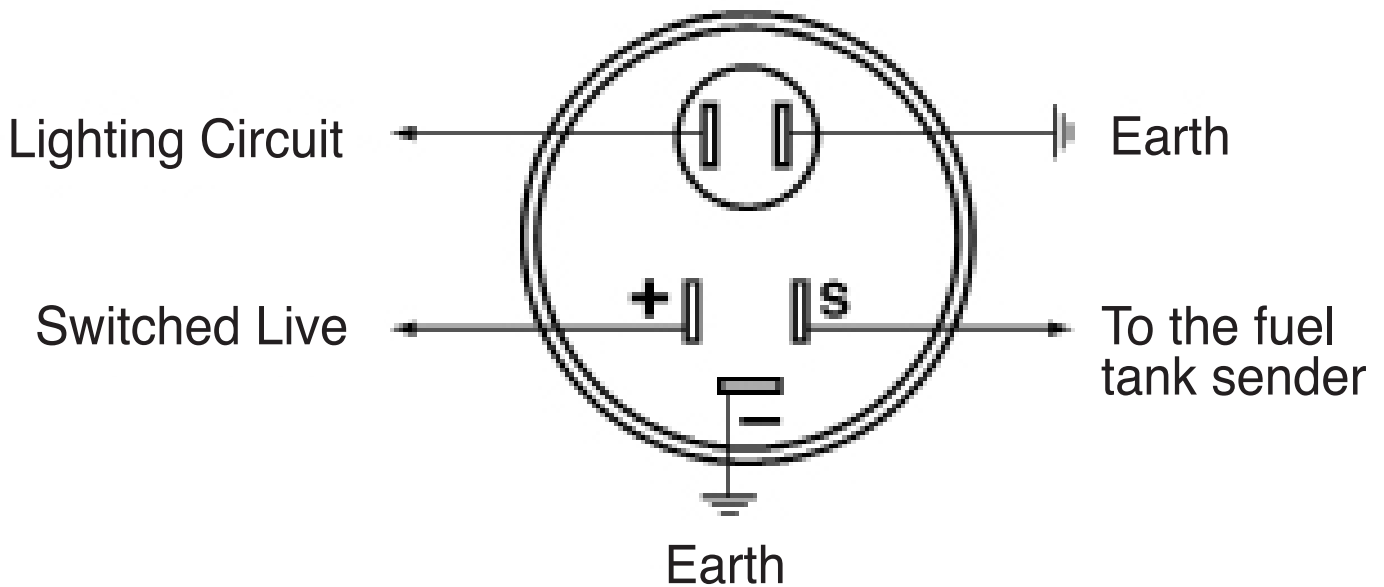

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.