

VDO OIL TEMPERATURE GAUGE AND DIPSTICK SENDER

FITS ALL 12V 1200, 1300, 1500 & 1600CC UPRIGHT ENGINES

JK part numbers: J11684

FITTING GUIDE

NOTE: Before installing the gauge, disconnect the earth terminal from the battery on your vehicle so that you do not create any short-circuits which may result in fire.

- 1. Choose a location to mount your gauge, allowing enough room at the rear.
- 2. Drill a hole 52mm in diameter then test the size by inserting your gauge.
- 3. Secure it from the back, using either the large ring or the clamps, depending on the gauge model supplied.

To wire up the gauge, follow the wiring guidelines shown.

- 4. Run a switched 12v live to the + symbol on the back of the gauge, this should be after the fusebox and should only be live when the ignition in turned on.
- 5. Run a wire from the symbol to an earthed part of your vehicle.
- 6. Run a wire from the S symbol on your gauge to the G symbol of the sender.
- 7. Run a wire from the remaining terminal on the sender to earth.
- Run a wire from the lighting circuit to either of the terminals on the bulb holder
- 9. Run a wire from the remaining terminal.
- 10. Reconnect your battery.


N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.



VDO OIL TEMPERATURE GAUGE AND DIPSTICK SENDER

FITS ALL 12V 1200, 1300, 1500 & 1600CC UPRIGHT ENGINES

JK part numbers: J11684

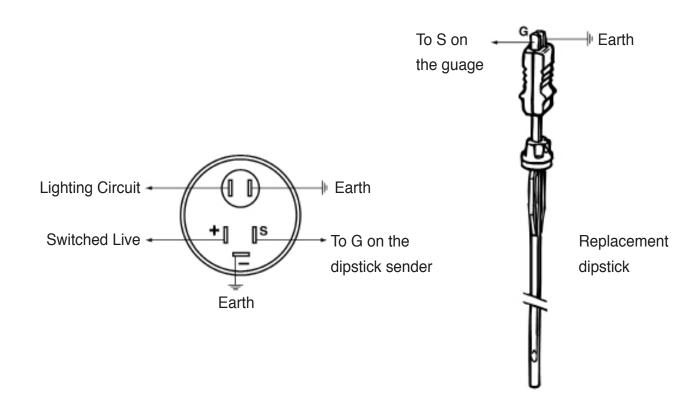

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.