



T4 Double Seat Swivel Base

JK Part Numbers J39381, J39388

1. Remove the 4 nuts securing the seat to the floor. Keep these for use in step 3.
2. Lift the seat off the floor studs and move it into the back of the vehicle.
3. Place the swivel plate on the floor studs (on the rare occasion the front drivers side locking bolt will need the seat base trimming by a few mm, It is very rare and not needed to be done on all seat bases) with the 2 corner mount bolts to the near side of the vehicle (studs may need trimming by 5mm in some situations) and take out the 2 x locating pins and 4 x security pins and turn the four locking bolts 90 degrees anti-clockwise raise up and turn 90 degrees clockwise to secure them in the raised position then secure the bottom plate down with the four nuts saved in step 1.
4. Re-secure the top plate and reinstall the seat.

OPERATING THE SWIVEL PLATE

Rotating the Seat to Face the Rear:

5. Take out the 2 x locating pins and 4 x security pins and turn the four locking bolts 90 degrees anti-clockwise raise up and turn 90 degrees clockwise to secure them in the raised position.
6. Position yourself behind the seat and grasp it at each side at or below cushion level.
7. Push it forward and slightly to the left.
8. Rotate it anti clockwise until it is facing to the rear.
9. Adjust it into position (N.B. The seat does not lock in the 'camping' position to maintain safety so the vehicle is not driven while set this way)
10. Rotating the Seat to Face the Front
11. Repeat the above but rotate the seat in the clockwise direction.
12. Secure the seat with the four locking bolts, re-fit locating / security pins.