

SPARE WHEEL MOUNT

T2 SPLIT 1950-1967, T2 BAY 1967-1979

JK Part Number: J10552

FITTING GUIDE: 1973-1977

1. Remove the VW emblem and any bushings from your front panel.
2. Carefully align the lower 2 holes of the wheel mount with the VW emblem holes and drill two 1/4" (6.25mm) holes into the panel through the top wheel mount holes.
3. Re-drill the 4 holes to 3/8" (9mm) in diameter.
4. Place 4 Molly fasteners into the panel then insert 4 Molly screws through the wheel mount and securely tighten to the panel.
5. Mount the spare wheel, inside out and secure with locks and nuts.

NOTE: Large flat washers may be used in front of the nuts



1968-1972


1. Remove the VW emblem and any bushings from the front panel.
2. Re-drill the 4 emblem holes to 3/8" (9mm) in diameter.
3. Proceed with the 73-77 instructions from step 4 onwards

Pre 1968

1. Remove the VW emblem and any bushings from the front panel.
2. Centre the wheel mount on the front panel and drill 4 x 1/4" (6.25mm) holes into the panel using the wheel mount as guide.

NOTE: Do not use the 2 holes at the centre of the panel

3. Re-drill the 4 holes to 3/8" (9mm) in diameter.
4. Proceed with the 73-77 instructions from step 4 onwards

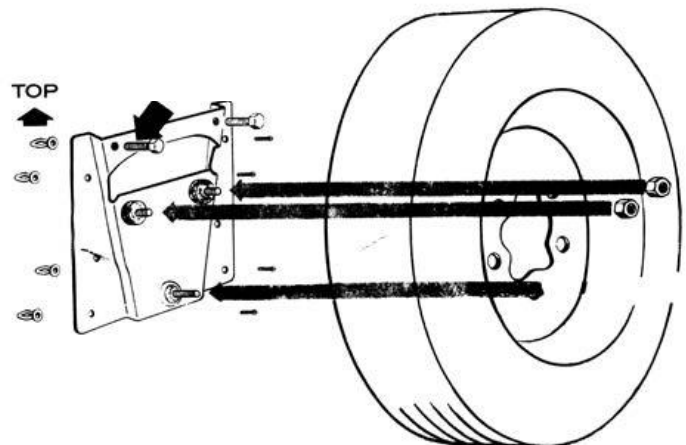

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.