

QUICK SHIFT KIT

FITS ALL AIRCOOLED VOLKSWAGENS

JK Part Numbers: J11070


The quickhift plate shortens the throw of the gearstick, meaking gear changes quicker. You only need a 13mm spanner to do this job but you might consider changing the gearchange stop plate at the same time.

FITTING GUIDE

1. Place gear lever in neutral and remove rubber mat from cab area. Undo the 2 bolts securing the gear lever to the floor. Remove the gearlever housing carefully, noting the position of the gearshift stop plate underneath and which way round it fits. This can also then be removed. Remove the gearknob and gear lever housing/boot from lever. Clean all components.



2. Place chrome circular fulcrum ball from quick-shift kit over the lever, followed by the lever housing/boot and gearknob.

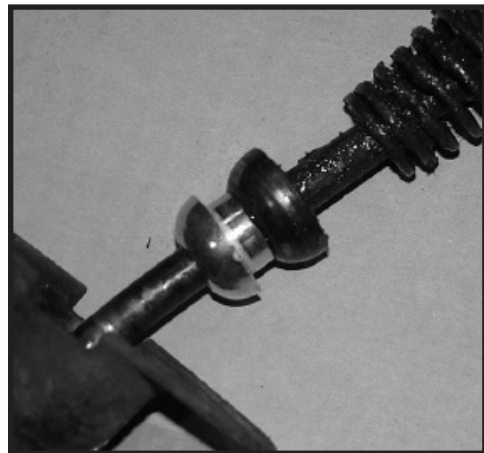

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.

QUICK SHIFT KIT

FITS ALL AIRCOOLED VOLKSWAGENS

JK Part Numbers: J11070

3. Install gearshift stop plate, ensuring the large upturned edge is towards the offside of the vehicle. Install spacer device over the top of the stop plate as shown.



4. Lubricate all parts with grease before replacing assembly with the supplied longer bolts in the original position, making sure the gear stick ball locates in the shift rod cup.



5. With the vehicle in second gear the base of the gearstick should be at 90° to the floor. If it isn't you need to move the base forward or backwards until the gear stick is at a right angle to the floor. Once this is achieved, tighten the bolts and replace the floor mat.



N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.