

## UNDER DASH TRAY

### T2 BAY 1967-1979

JK part numbers: J12411



*Before you start, check you have all the components*

*2 Dash Trays (left and right)*

*1 Central Mount*

*Hardware inc. 4 screws, 2 nuts, 2 bolts and 8 washers.*


*Please Note: Do not over tighten screws or bolts as this may crack or damage the plastic.*

#### FITTING GUIDE

1. First of all the Central Mount has two dimples in the plastic. Drill two holes using a 6mm drill, using the dimples as guide points.

2. At the opposite end, drill two 6mm holes in the base of the Central Mount. The centres of the holes need to be 10mm from the back edge, and 15mm from the middle.

3. The corners of the trays need drilling, again with a 6mm drill bit. The centres of the holes need to be 15mm from the end and 15mm from the front edge.

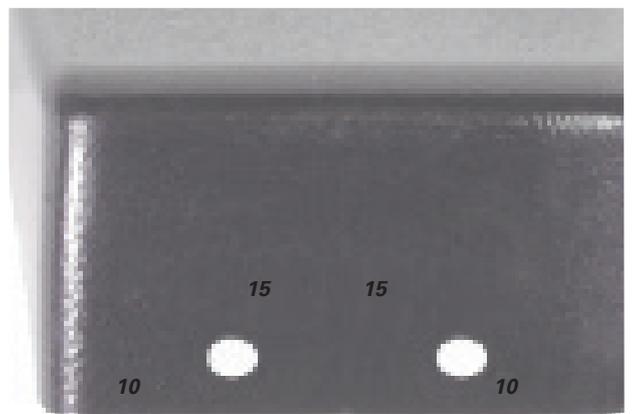


*N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.*

## UNDER DASH TRAY

### T2 BAY 1967-1979

JK part numbers: J12411

4. Turn both trays on their sides and using a 4mm drill bit, drill a hole in each of the molded bracket up stands.

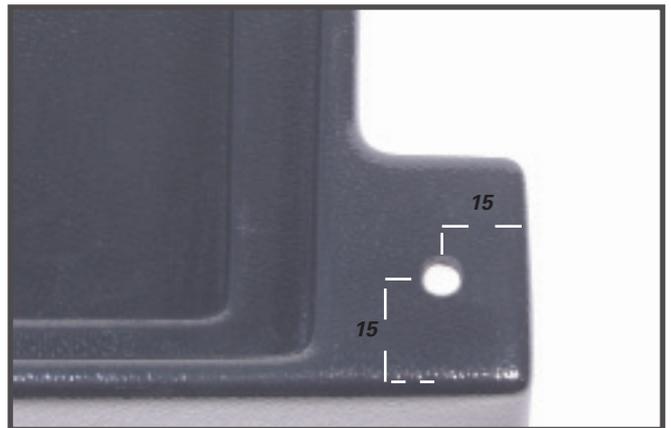

5. Remove the two large screws from above the handbrake lever.



*N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.*

## UNDER DASH TRAY

### T2 BAY 1967-1979

JK part numbers: J12411

6. Then using a hammer and a pin punch, drift out the pin and remove the handbreak handle.



7. This allows the central mount to slide on.



8. Screw the central mount to the dash using the large screws removed earlier and replace the handbrake handle.



*N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.*

## UNDER DASH TRAY

### T2 BAY 1967-1979

JK part numbers: J12411

*Note: If you are unable to remove the handbreak handle, you can cut the central mount as shown.*

*This allows the central mount to twist onto the handbreak bar. This allows the central mount to twist onto the handbreak bar.*



9. Offer up one of the under dash trays and bolt it into place using 1 nut, 1 bolt and 2 washers.



10. Hold the other end of the tray level, and using a 4mm drill bit, drill a hole through the tray into the front pillar.



*N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.*

## UNDER DASH TRAY

### T2 BAY 1967-1979

JK part numbers: J12411

11. Then screw the tray to the front



12. To attach the rear of the tray, hold the tray level using a 4mm drill bit, drill through the hole made previously, into the front bulkhead. Then screw the tray in place.



13. Repeat the process with the other



*N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.*