

THREE BOW ROOF RACK

T2 ALL MODELS - REAR FIT

T2 BAY - 1967-1979 - FRONT FIT

JK Part Numbers: J12629

Before you start, check you have all the components

- (a) 3 bows
- (b) 11 wooden slats with three holes plus
- (c) 2 wooden slats with seven holes
- (d) 4 corner tubes
- (e) 2 straight tubes
- (f) 4 joining clamps
- (g) 12 uprights
- (h) 2 uprights incorporating two screws
- (i) 6 gutter clamps
- (j) 1 bag of hardware


NOTE: Also includes 1 strip of rubber and 1 allen key



Tools

1. A large flat bladed screwdriver
2. A 13mm spanner

Note: An allen key is provided

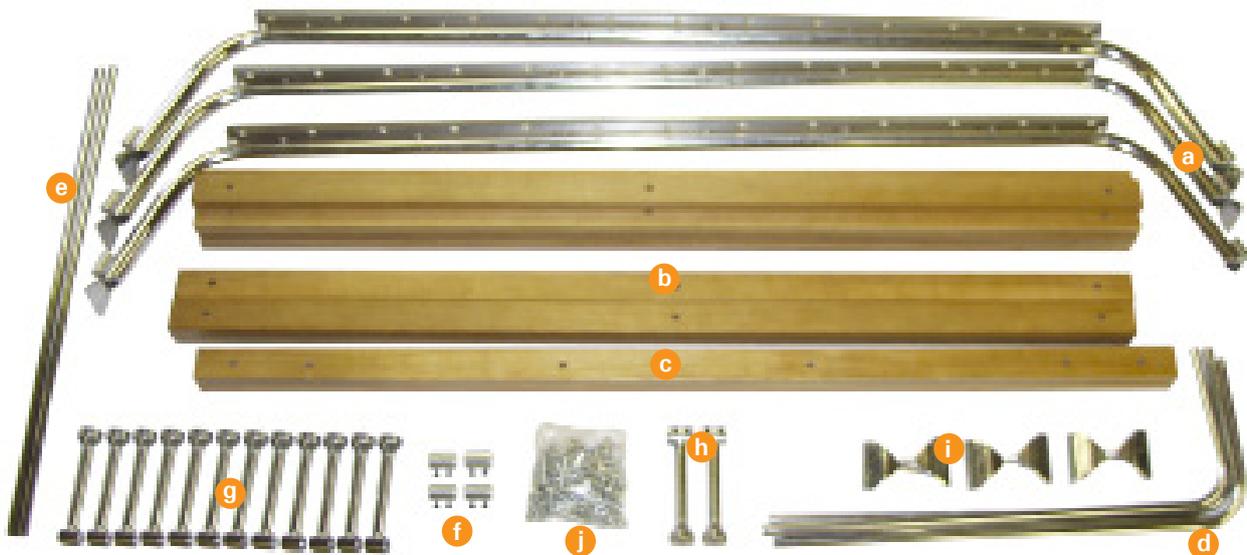

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.

THREE BOW ROOF RACK

T2 ALL MODELS - REAR FIT

T2 BAY - 1967-1979 - FRONT FIT

JK Part Numbers: J12629

Tips

- To ensure perfect alignment, assemble the roof rack finger tight.
- Then place the rack on your vans roof.
- When you are happy with the fit, tighten all of the bolts using the correct tools.
- Fitting requires 2 people.
- Take your time and pay particular care to avoid scratching your vehicles paintwork.

FITTING GUIDE

1. First place the 2 outer bows (a) parallel, with the mounting brackets facing inwards.

Then using the 2 wooden slats (c) fix these to the outermost holes on the bows.

Use a flat headed bolt from the top and lock nut underneath.

The third bow can then be bolted in the centre in the holes provided.

Use a tape measure to avoid mounting the central bow the wrong way round and do not tighten the bolts fully.



1. Assemble the base

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.

THREE BOW ROOF RACK

T2 ALL MODELS - REAR FIT

T2 BAY - 1967-1979 - FRONT FIT

JK Part Numbers: J12629

2. The top of the roof rack consist of these parts.

Slide the upright (g) onto the bars. Items (d) and (e) clamp (f) the bars together.



2. Assemble the rack

This picture shows half of the rack, so repeat this for the other side.



3. The finished job!

3. Finally all that remains is to bolt on the rest of the wooden slats, add the top bars that you made up in step 2 and then cut and stick the self adhesive rubber onto the feet to protect your vans gutters.

To fit the rack, it is recommended that you use 2 people to carefully place the rack onto your roof and when you are happy with the alignment, tighten all the loose bolts up.

Taking care of your roof rack

If you plan to use your roof rack all year round, keep it clean, touching up any scratches when they happen and treating the wood with wood preservative from time to time (Available from all good DIY stores) will help keep it looking as good as new.